

# 1. Preparing for dubbing (CASSETTE TAPE TO DVD):

 
*TV should be on Video setting*

1. Insert a cassette tape to be dubbed (copied)
2. Insert a recordable DVD (DVD-RW recommended)

**\*\*Wait for DVD to be formatted and LOADING is completed – watch TV screen\*\***

Use DVD+RW – rewriteable disks for practice

3. Make sure there is enough space on the DVD
4. Press [SETUP] and use [▼/▲] to select “GENERAL SETTING”, then press [OK]
  - “General Setting” menu will appear.
5. Use [▼/▲] to select “Recording”, then press [OK]
  - “Recording” menu will appear.
6. Use [▼/▲] to select “Dubbing Mode”, then press [OK]
  - Selection menu will appear.
7. Use [▼/▲] to select “VCR➔DVD”, then press [OK]

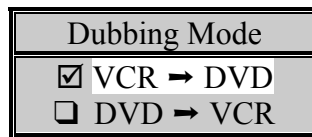

- Press [SETUP] to EXIT
8. Press [VCR], then press [PLAY▶] to find the point where you wish to start dubbing.
  9. Press [PAUSE II] when you come to the desired start point.
  10. Press [DVD], then press [REC MODE] repeatedly to select the desired recording mode. (SP – 2HR) (*red dot will appear on DVD/VHS player's screen*)

**\*\*\*REC MODE – bottom-left side of remote control\*\*\***

11. Press [DIRECT DUBBING].
  - VCR to DVD duplication will start. When finished message will appear (WRITING TO DISK). Wait until finished. Next message is to FINALIZE the disk.

**\*\*\*\* DO NOT FINALIZE AT THIS POINT. EDIT DISK FIRST\*\*\*\*\***

12. Press [STOP■] to stop the dubbing.

## 2. EDITING DISCS:

Edit discs for the following items:

- Deleteing Titles
- Putting names on Titles
- Putting Name on disc
- Erasing disc

Delete titles which you do not need anymore. **\*\*\*Once a Title is deleted it cannot be brought back to the disc.\*\*\***

*\*\* For DVD+RW/DVD-RW, when the last recorded title in the title list is deleted, the available disc space to record on will be increased. For DVD+R/DVD-R, the disc space to record on will not be changed.\*\**

 
### Deleting Titles:

1. Press [DVD] first, then press [TITLE]
2. Use [▲/▼] to select a desired title, then press [OK]

**Note:**

- Deleted part of the titles in the capacity indicator changes in color.
- As for DVD+RW/DVD-RW if you delete the title, deleted title will be displayed as 'EMPTY TITLE'.

3. Use [▲/▼] to select "EDIT", then press [OK].
4. Use [▲/▼] to select "TITLE DELETE", then press [OK].
5. Use [▲/▼] to select "YES", then press [OK].
  - "Are you sure?" will appear. Select "YES" and then press [OK]. Title will be deleted and data will be written onto the disc momentarily.

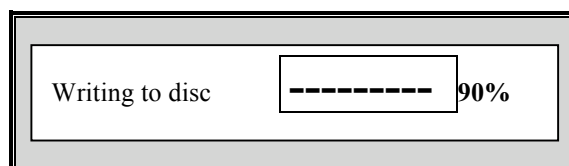

**This operation may take a while to be completed.**

**After editing is complete, the title list will appear.**

**Putting names on Titles:**

1. Press [DVD] first, then press [TITLE].
2. Use [▲/▼] to select a desired title, then press [OK].
3. Use [▲/▼] to select “EDIT”, then press [OK].
4. Use [▲/▼] to select “EDIT TITLE NAME”, then press [OK].
  - Select all caps/lower case/numbers/symbols as needed, using scroll keys
  - Click on the CLEAR button (which is above the Rec. Mode) to erase the words VHS.... in the area where you will write the title.
  - Type in name of title.

**Note: if you are using letters on the same button, you will need to scroll over to enter next letter. If letter/number is on a different key, just continue typing. To type in symbols use Key #1.**

5. When you finish entering Title Name, use [▲/▼] to select “YES”, then press [OK]. *The name you entered will be activated for the title.*
6. After this operation is completed, press [BACK ↵] to exit. *Data will be written onto the disc momentarily.*

**This operation may take a while to be completed.**

#### 4. PLAYING THE DISC ON OTHER DVD PLAYERS

Finalizing the Disc:

 
 DVD+R  DVD-RW  DVD-R

**\*\*You will need to finalize your discs to play them back on other DVD players. Finalizing may take several minutes/up to an hour. \*\***

**Note**

- *Once you have finalized a DVD+R/DVD-R, you cannot edit/record anything on that disc.*
- *There is no need to finalize DVD+RW*
- *DO NOT power off during finalization, this will result in malfunction.*

1. Press [SETUP] *\*If you are in the title list, you need to exit from the list by pressing [STOP■] before you are able to access the main menu.*
2. Use [▲/▼] to select “Disc Edit”, then press [OK]. *“Disc Edit” will appear.*
3. Use [▲/▼] to select “FINALIZE”, then press [OK].
4. Use [▲/▼] to select “YES”, then press [OK].




Finalizing will start.

**To cancel finalizing.....**

 **(DVD-RW only)**

- To cancel finalizing at Step 4, press [STOP ■], select “YES” with [▲/▼], then press [OK]. Finalizing is canceled and the unit will be in **STOP MODE**.

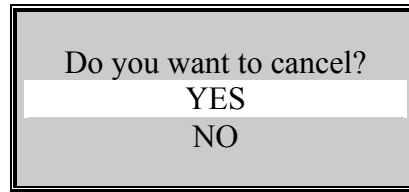

- If ⊙ appears when pressing [STOP], you cannot cancel finalizing because the finalizing has been in certain progress.
- When selecting “NO” and press [OK] or [BACK ⏪], finalizing will be continued.
- You **CANNOT** cancel finalizing the DVD+R/DVD-R once it has started.